


STALKER LIDAR

Quick Start

 


Sight Alignment Test – press and hold trigger, then press **TEST** - 5R will appear then release **TEST**.

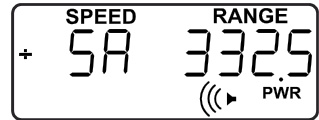


HUD Brightness – press **HUD** repeatedly to desired level.

RANGE Only – press **MODE** switch to obtain “- - - -” only in RANGE window.



SPEED/RANGE Mode – press **MODE** switch to obtain “- - - -” and “- - - -” in SPEED and RANGE windows.

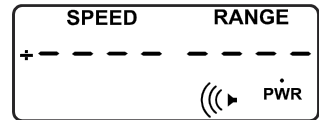


HUD Speed and Range – to set for range only, or range and speed showing in the HUD, press **MENU** switch. Continue pressing **MENU** until HUD 5 or HUD r appear. To turn off either or both, use the UP/DN arrows. To save and return to normal operation, press and hold the **MENU** switch until a beep is heard and the display returns to normal mode.


Audio – press speaker/volume button – 4 levels plus off unless restricted in your unit.

POWER DOWN Limits – press **MENU** switch – press **MENU** until P-dn appears. Use UP/DN arrows to set value in minutes. “0” is off. Press and hold **MENU** key to exit.

Inclement Weather Mode – press and hold **MODE** switch until **none** appears in Speed window. Press UP/DN arrows to scroll through available options. First option is Inclement Weather – **in** on. Press and hold **MODE** switch to accept – **in** will appear at end of SPEED window. Minimum operating distance is 250' (76 meters). To clear, press and hold **MODE** switch.

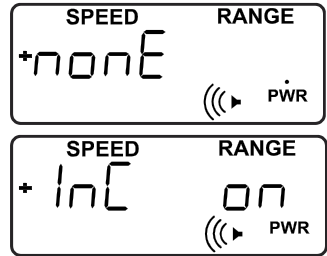

Zone Mode – press and hold **MODE** switch until **none** appears in Speed window. Press UP/DN arrows to scroll through available options. When **zone** appears, press and hold **MODE** switch and follow prompts to measure furthest and closest reduced speed signs. Speeds will only be shown when target vehicle is within the “zone” set by the signs. To clear, press and hold **MODE** switch.

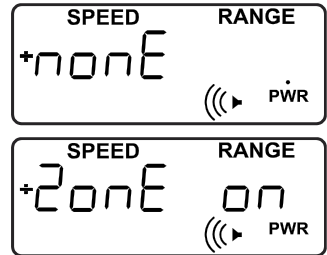

Auto-Obstruction mode (XLR only) - press and hold **MODE** switch until **none** appears in speed window. Press UP/DN arrows to scroll to **ob** on. Press and hold the **MODE** switch until you hear a beep and **L** appears at the end of the speed window. Unit is in LEARN mode. Aim at moving targets through the obstructions and pull the trigger to track. When a target is detected (max 5 sec.), unit will display speed and target range. Press and hold the **MODE** switch to accept (a beep will be heard). Now the unit will ignore all obstructions out to a maximum of 800' (244 meters) and only display vehicle speeds/range.

For further details and instructions, please refer to the Operator's Manual.



applied concepts, inc.
 2609 Technology Drive ■ Plano, Texas 75074
 972.398.3780 ■ Fax 972.398.3781

011-0171-00 Rev A

800-STALKER